

Eleaf iStick X80/XC100 Upgrade Instructions

1, Make sure your computer is running **Windows OS**, then download the corresponding device software package from the Eleaf official website. Unzip the package and ensure all files are kept in the same folder.

Download the file below to upgrade your iStick X80/XC100 to V1.00.



[Firmware V1.00](#)

Unzip the package and ensure all files are kept in the same folder.



iStick
X80_V1.00.bin



UpdateFirmware

2, Double-click **UpdateFirmware** to open it. Make sure the device is powered on, then use the original USB cable included in the package to connect the device to your computer.



Device not connected



Device connected and detected

3, To upgrade the device firmware, click the **Update** button, select the upgrade file, then click **Open** to start upgrading. Ensure the device stays well connected during the process until the "Firmware update completed" screen appears. For **UI upgrade**, click the **UI** button. The steps and precautions are the same as firmware upgrade.



Select Firmware or UI upgrade file Firmware upgrade successful UI upgrade successful

4, If the upgrade fails and the device cannot be powered on, follow the activation steps below to restore and upgrade:

- **iStick X80:** Connect the device to your computer with a USB cable, then hold the fire button and use a pin to press the reset button at the bottom. Once the upgrade tool shows the device is detected, release the fire button and repeat the normal upgrade steps.
- **iStick XC100:** Remove the battery first, then hold the fire button while inserting the USB cable to connect the device to your computer. Once the upgrade tool shows the device is detected, release the fire button and repeat the normal upgrade steps.